 


Residential Community Laundry Guide: Operating Machines

WASHER


1

Add $\frac{1}{4}$ cup of detergent or one pod inside cylinder

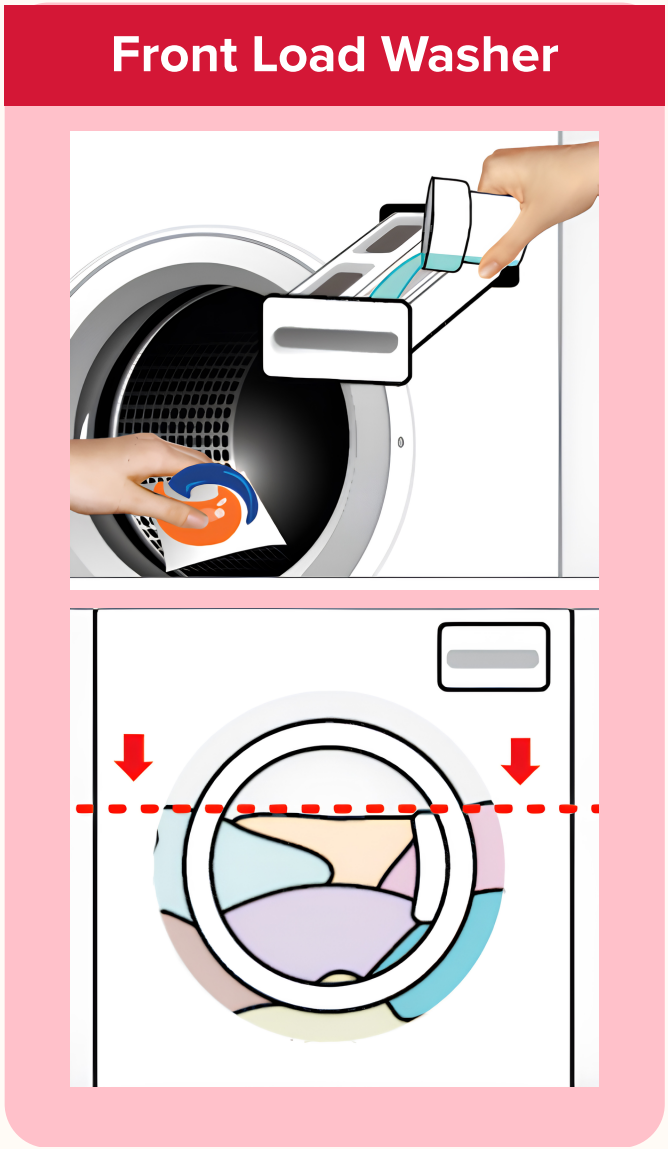

2

Load clothes loosely and evenly below **MAX** fill level

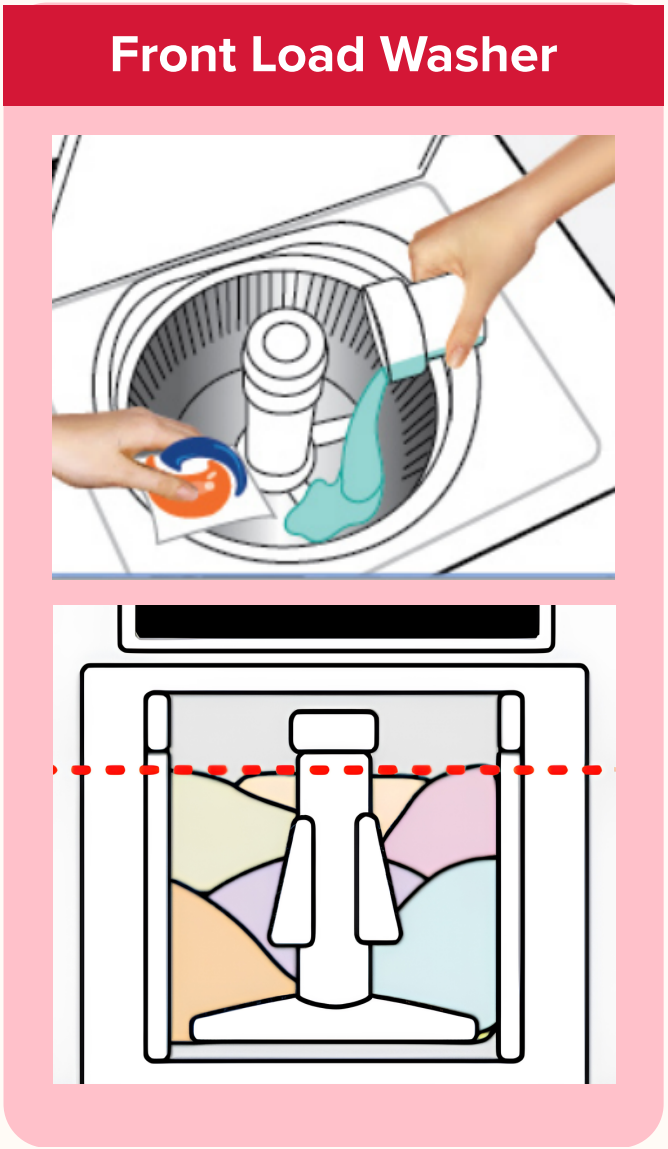

3



Select temperature/soil/fabric settings

4



Use payment method on machine

5



To start, press fabric setting or start


6



After use, clean machine and keep fresh with door open

DRYER

1

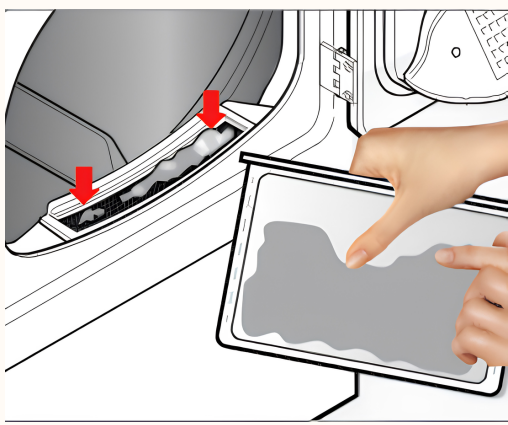

Clean lint screen

2



Load one wash load and close door

3



Select temperature/soil/fabric settings

4



Use payment method on machine

5



To start, press fabric setting or start

Service Request

-  Use the WASH-Connect App
-  Online at wash.com/service
-  Call WASH at 800.342.5932